

PA3XLERGENIV  
PA3XGENIII  
PA6X



**READ THIS FIRST!**

## PRIMARY ARMS® Magnifiers and Mounts

### Tips for setting up Magnifier

**NOTE:** Before mounting the magnifier behind your red dot sight, look at an object at least 100 yards away and make sure to adjust the focus ring until a clear view is achieved. After mounting the magnifier, make sure to set your red dot sight at the lowest visible setting to allow for a clean reticle.

### Centering the dot

The magnifier has internal azimuth and elevation adjustments to center the dot.



Once the magnifier is properly installed, you can move the visible location of the dot by rotating the two adjustment screws located on the top and right side of the magnifier. With these adjustment screws, you can get the dot close to the center. The point of impact will not be affected if the dot is not perfectly centered.

### Screw Mount:

1. Remove top strap and place magnifier in mount. Place top strap back on the mount and hand tighten the six mounting screws with the included tool.
2. Loosen the mounting nut so that the mount can clamp around the weapon rail and place in a desired position.
3. Secure the magnifier to the weapon rail by tightening the mount nut. First, ensure that the magnifier is correctly positioned and that the mount's cross bolt fits into a groove on the weapon rail. Make sure the mount is flat on the receiver rail and that the clamping surface is properly positioned.

**NOTE:** To make sure that the mount nut is firmly tightened, turn the nut clockwise until resistance is encountered. After that, turn another 1/4 turn.



**WARNING!**  
**Do not over tighten.**

### Quick Detach Mount:

1. Remove top strap and place magnifier in mount. Place top strap back on the mount and hand tighten the six mounting screws with the included tool.
2. Open QD lever so that the mount can clamp around the weapon rail and place in a desired position.
3. Close QD lever and check for secure fit. The mount clamp can be adjusted for a better fit via the nut that is across from the QD Lever.

**NOTE:** Adjust the nut in **VERY** small increments till mount is locked firmly and no front and back movement is allowed.



**WARNING!**  
**Do not over tighten.**

### Flip-to-Side Mount:

1. Remove top strap and place magnifier in mount. Place top strap back on the mount and hand tighten the six mounting screws with the included tool.
2. Loosen the mounting nut so that the mount can clamp around the weapon rail and place in desired position.
3. Secure the magnifier to the weapon rail by tightening the mount nut. First, ensure that the magnifier is correctly positioned and that the mount's cross bolt fits into a groove on the weapon rail. Make sure the

mount is flat on the receiver rail and that the clamping surface is properly positioned.

**NOTE:** The cross bolt comes from the factory with a small amount of reusable thread sealer. To make sure that the mount nut is firmly tightened, turn the nut clockwise until resistance is encountered. After that, turn another 1/4 turn.

**WARNING!**  
**Do not over tighten.**

### Warranty

Primary Arms guarantees your magnifier and mount to be free from manufacturer defects for a period of one year. The warranty is valid provided that the mount has not been misused, disassembled or tampered with in any way. Any attempt to disassemble or repair the product will void the warranty.



Email: [info@PrimaryArms.com](mailto:info@PrimaryArms.com)  
713-344-9600  
[www.primaryarms.com](http://www.primaryarms.com)

